

How-To: Update ACEmanager Passwords from ALMS

Select the devices you want to update

From the menu choose...

Name	Last Com	Labels	Serial Number	Firmware	C...	Month t	IP Address
Los Angeles RV50	a few second	Industrial Los Angeles Veri...	LT60520150021025	ALEOS RV50 LWM2M (4.9.0.040)	VE...	1.19 MB	166.161.15...
Dallas RV50	a few second	Dallas Industrial Verizon	LT53840242021025	ALEOS RV50 LWM2M (4.9.0.040)	VE...	3.34 MB	-
Tampa RV50	7 minutes ag	Industrial Tampa Verizon	LT60520091011025	ALEOS RV50 LWM2M (4.9.0.040)	VZ...	1.52 MB	166.155.9...
Pittsburgh RV50	9 minutes ag	Industrial Pittsburgh Veriz...	LT60520148021025	ALEOS RV50 LWM2M (4.9.0.040)	VE...	72.23 MB	100.127.11...
San Jose RV50	12 minutes a	Industrial San Jose Verizon	LT60520128011025	ALEOS RV50 LWM2M (4.9.0.040)	VZ...	8.57 MB	166.255.14...
Vancouver RV50	14 minutes a	Industrial Vancouver Warr...	LT60520100011025	ALEOS RV50 LWM2M (4.9.0.040)	TE...	60.24 MB	10.171.215...

How-To: Update ACEmanager Passwords from ALMS

1. Select a unique identifier
2. Select the version of firmware for the devices to update
 - This works best if they are all the same firmware version
3. Search for “ACEmanager password” and select

Click the “generate” button to generate your template

Apply setting (CSV)

Apply a setting with different values for each System.

Step1: Generate your template

Select how to identify them, then select the setting to change and download a prepopulated template

1 Identifier Serial Number

2 Setting ALEOS RV50 LWM2M (4.9.0.040)

3 ALEOS > Admin > Change Password > ACEmana...
ACEmanager
ALEOS > Admin > Change Password >
ACEmanager Password (lwm2m.10250.0.5003)

Step2: Update CSV and finalize

Once you have downloaded the template CSV file (id,setting), update the file with new values for each System and upload it.

Values + Select a CSV...

Advanced settings ⚙️

How-To: Update ACEmanager Passwords from ALMS

4. The system will launch an operation to generate a CSV file
5. The green banner will indicate success
6. Click "Download your template" to download the csv file

Apply setting (CSV)

Apply a setting with different values for each System.

Step1: Generate your template

Select how to identify them, then select the setting to change and download a prepopulated template

Identifier: Serial Number

Setting: ALEOS RV50 LWM2M (4.9.0.040)

ALEOS > Admin > Change Password > ACEmana...

6 Download your template...

Step2: Update CSV and finalize

Once you have downloaded the template CSV file (id,setting), update the file with new values for each System and upload it.

Values: + Select a CSV...

Advanced settings: [Settings Icon]

5 Export System(s) data succeeded

4 Export System(s) data launched

Abort

Your feedback

How-To: Update ACEmanager Passwords from ALMS

7. In the downloaded CSV file, change the passwords to the new values and save.
 - We recommend making them all strong and unique

	A	B	C	D
1	UID	GATEWAY[SERIAL NUMBER]	LWM2M.10250.0.5003	
2	0b5acf627d194112ade1628f38d4261b	LT60520150021025	NewPassword1	
3	77bfe6b605424f8d80b77e86c6fb97a3	LT53840242021025	NewPassword2	
4	6fb96b6d19b24633820ca963423ab192	LT60520091011025	NewPassword3	
5	f33cbb0715dd457ea5cb0bd7d5695f1c	LT60520148021025	NewPassword4	
6	7ef87e0de96343fda0360a5efc2d83aa	LT60520128011025	NewPassword5	
7	c39571e823c54793863586a119352b0f	LT60520100011025	NewPassword6	
8				
9				

7

How-To: Update ACEmanager Passwords from ALMS

Identifier: Serial Number

Setting: ALEOS RV50 LWM2M (4.9.0.040)

ALEOS > Admin > Change Password > ACEma...

Download your template...

Step2: Update CSV and finalize

Once you have downloaded the template CSV file (id,setting), update the file with new values for each System and upload it.

Values: + Select a CSV...
new_passwords.csv

Advanced settings

Scheduling: Next connection

Timeout

Send email notification when operation completed

Apply setting (CSV) Cancel

8. Click on "Select a CSV" and select the file you just saved
9. Advanced settings are optional and let you schedule the update
10. Optionally, you can send email notifications on confirmation
11. Click "Apply setting (CSV)" to initiate the update.

As devices check in, they will update the ACEmanager password